


MODE

KS1460 Redwood Fuelbed Instructions


Retainer Installation

Before installing logs onto the fire infill, first prepare the integrated infill retainers and the loose log retainers. The kit includes 15 loose log retainers using finger folds to secure them to the infill and to support the logs.

Flat retainer 103540.

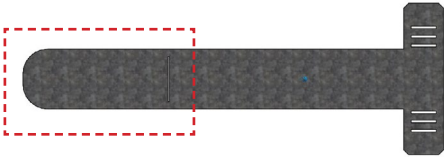


Folded retainer, all folds 90°.

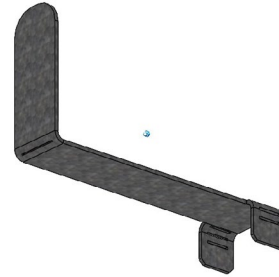


With each retainer this fold supports the log.

Below: Infill assembly with 15 x highlighted 103540 log retainers. Once folded always orientate the tall vertical fold inward towards the burners as shown below.

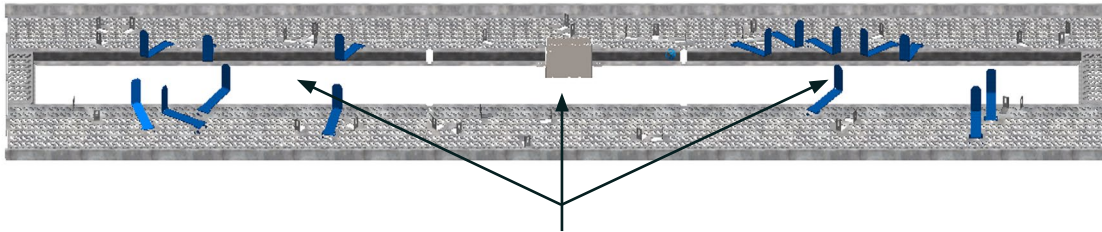


3 x burners in middle of infill not shown for clarity.

Below: Locate slots for retainer legs.

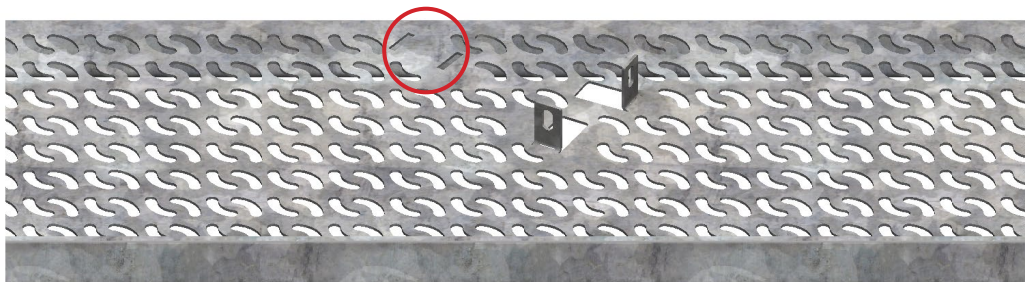


Below: Insert retainer legs into slots orientated towards burners.

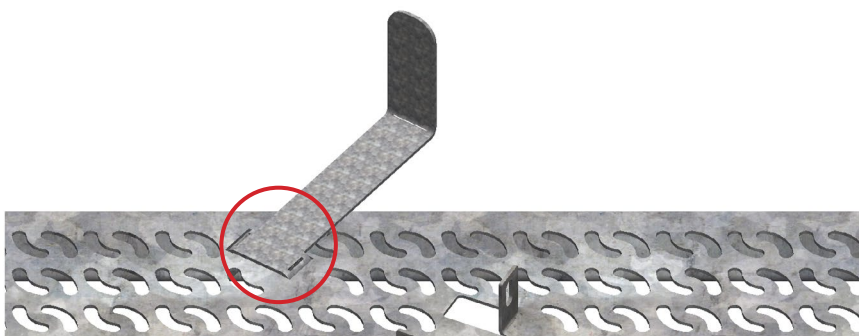

MODE

KS1460 Redwood Fuelbed Instructions

Below infill underside view: fold over retainer legs to fix in place on the infill.

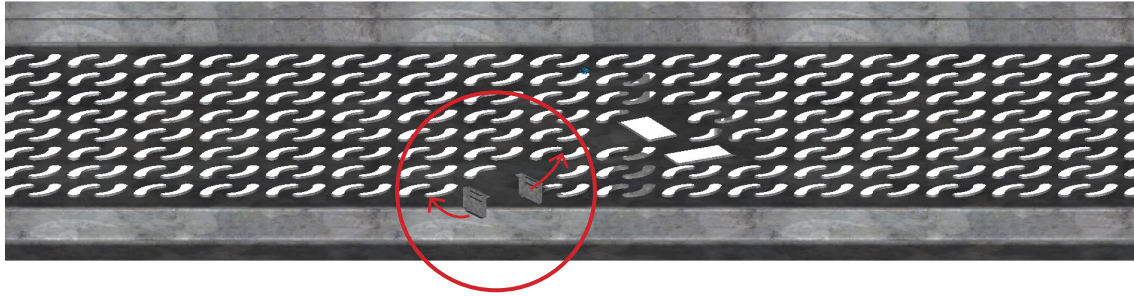

Redwood Logs and Embers Installation

Logs must be located correctly as illustrated in this section.

The final log layout should replicate the image shown in Step 3. After the logs have been located correctly, place the embers in a SINGLE EVEN layer around the logs, do not add additional embers use only the quantity of bags provided. The embers must not cover the pilot flame, inside the pilot guard must be clear of embers.

Note: Improper positioning of any fuel bed media may create carbon build-up and will alter the units performance. Malfunctions due to improper fuel media placement will not be covered under warranty.

Redwood Log Index:




Use the index above as a guide for selecting the correct logs.

MODE


KS1460 Redwood Fuelbed Instructions

Redwood Log Setup

Step 1: Front

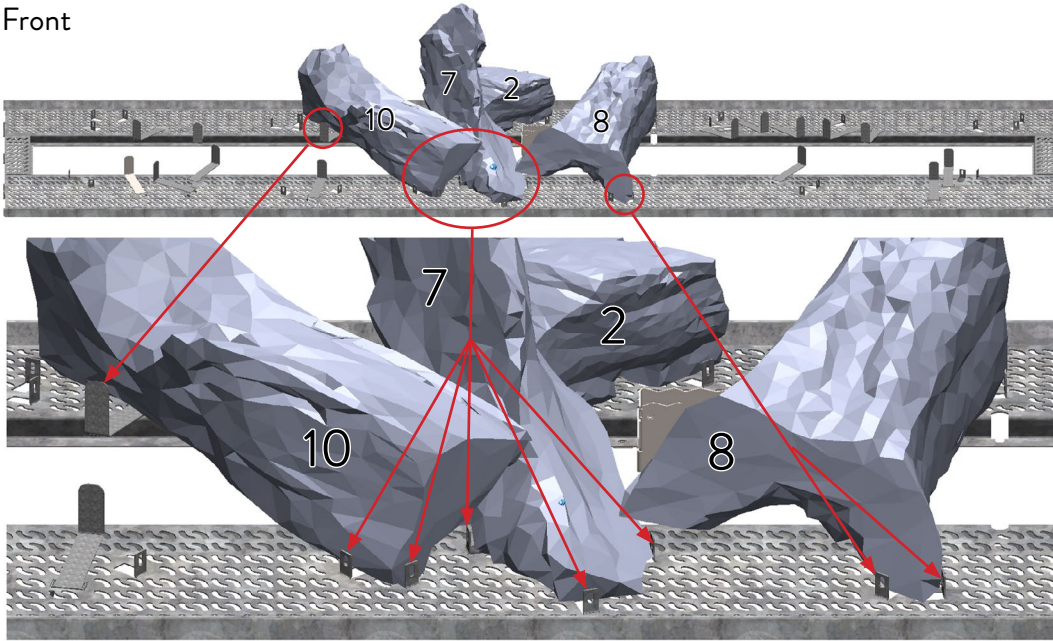


Step 1: Rear

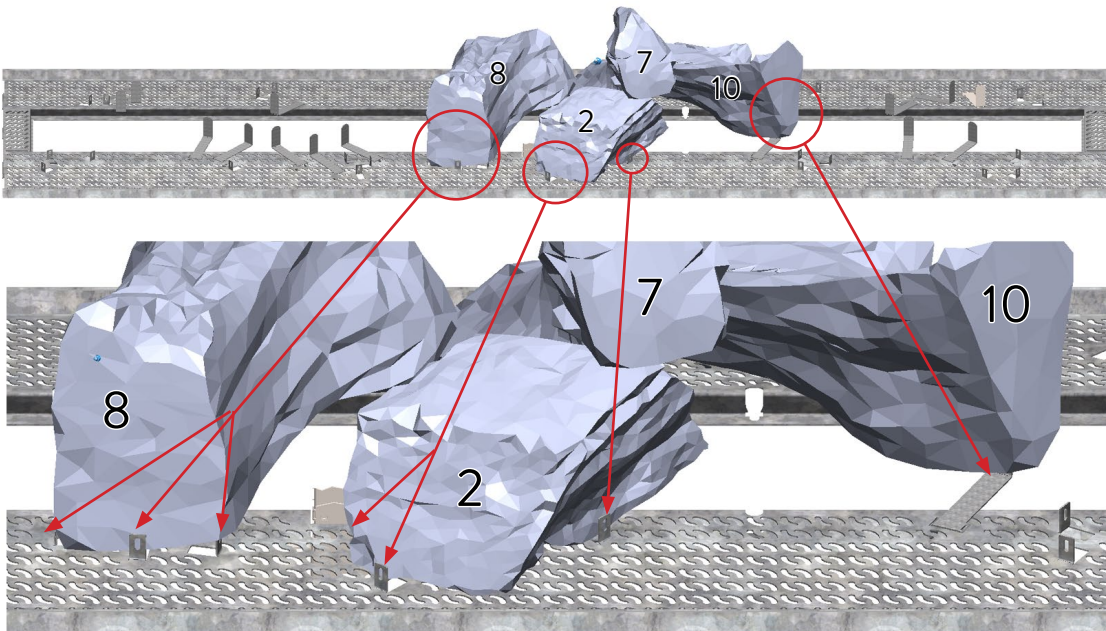


MODE

KS1460 Redwood Fuelbed Instructions

Step 2: Front

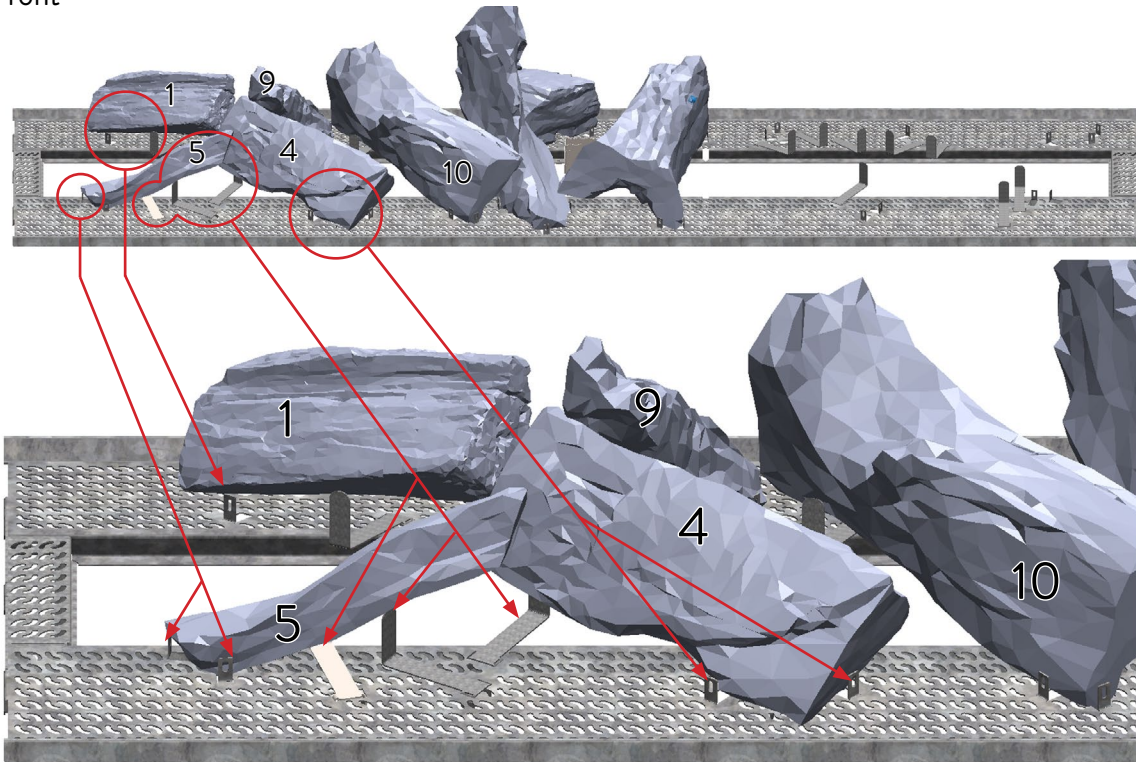


Step 2: Rear

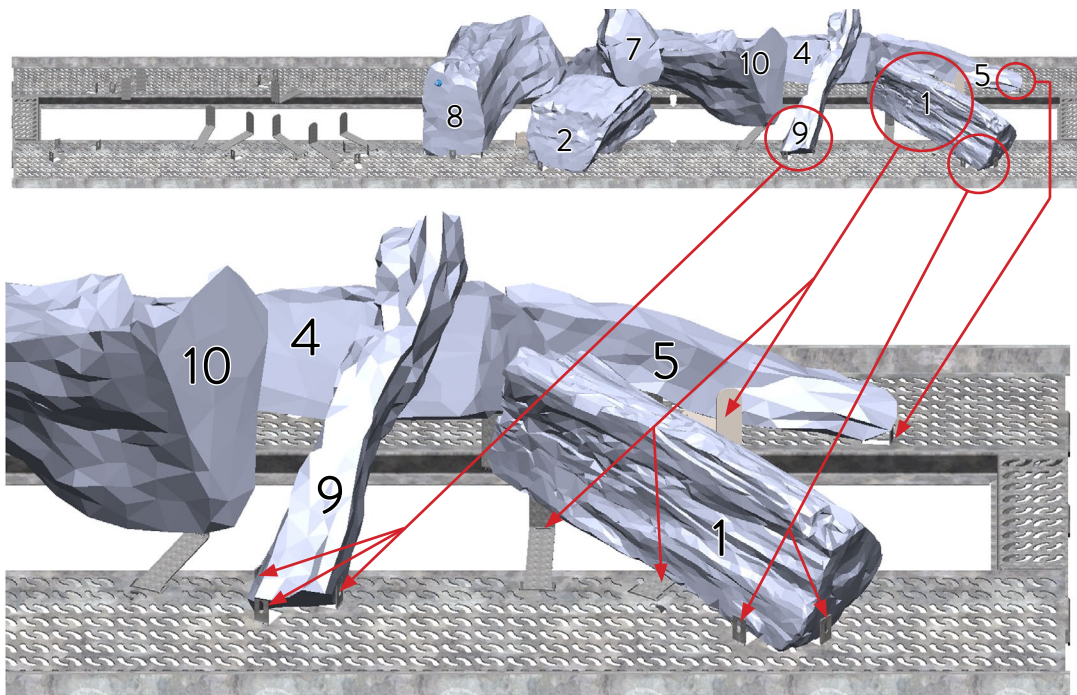


MODE

KS1460 Redwood Fuelbed Instructions

Step 3: Front

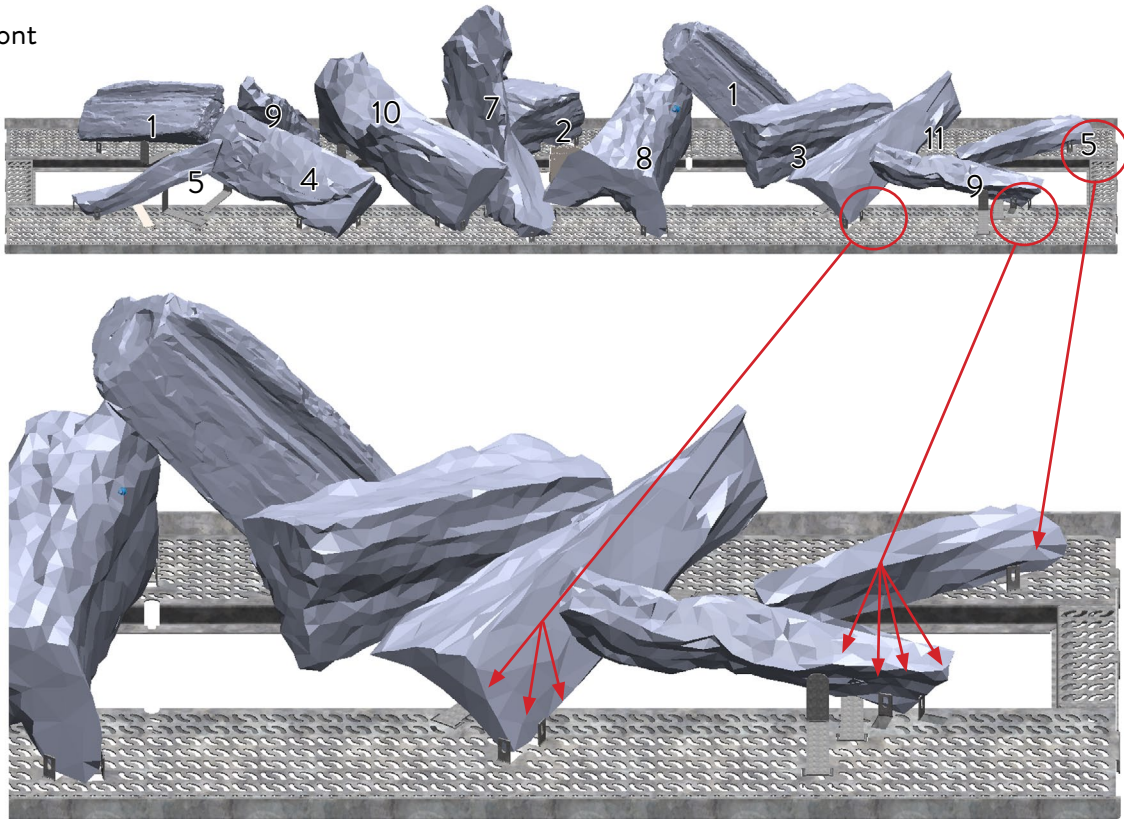


Step 3: Rear

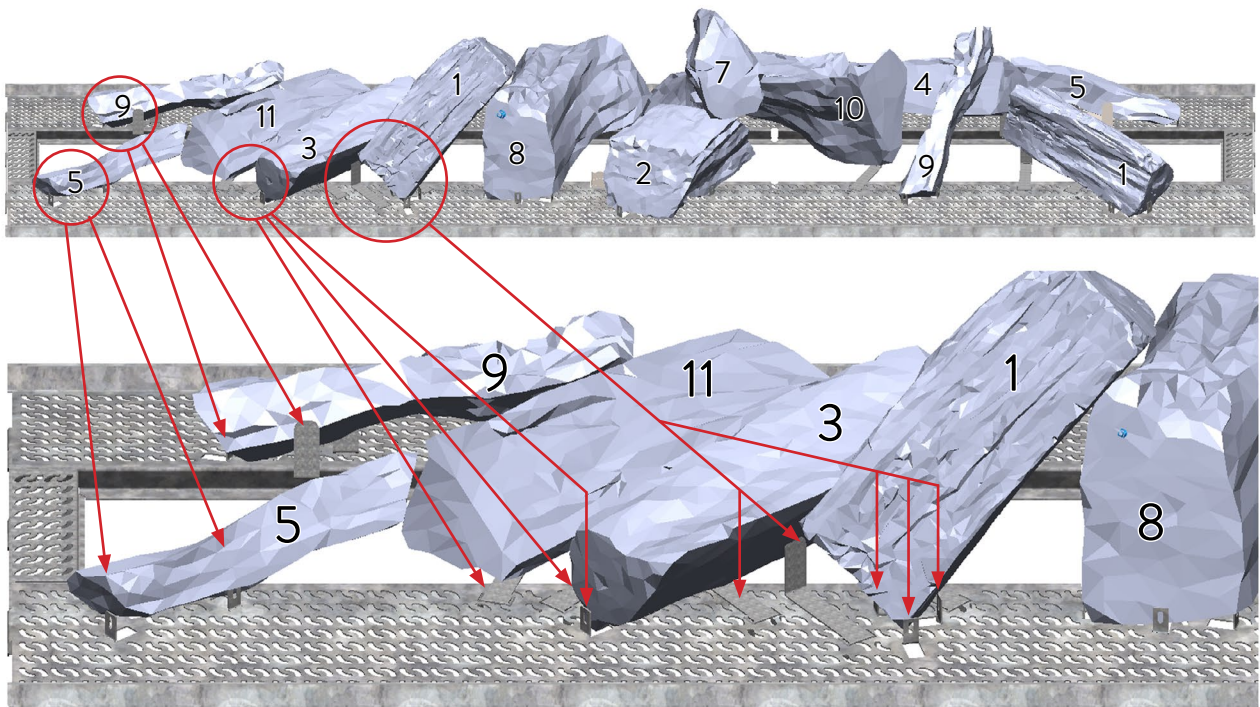


MODE

KS1460 Redwood Fuelbed Instructions

Front appearance of completed Redwood log fuel bed. Ready for embers.

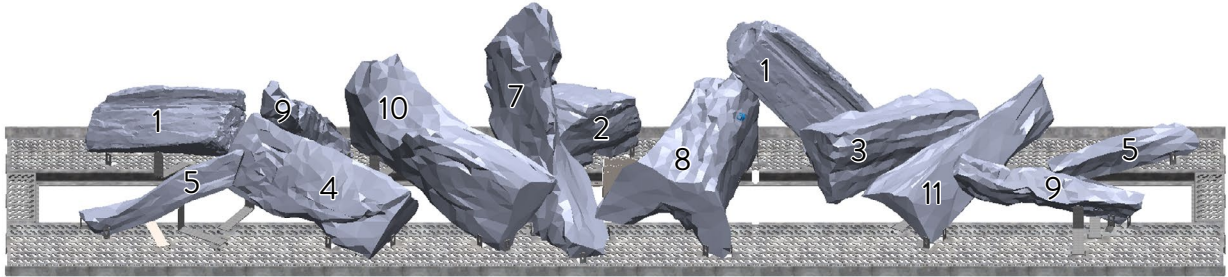

Rear appearance of completed Redwood log fuel bed. Ready for embers.

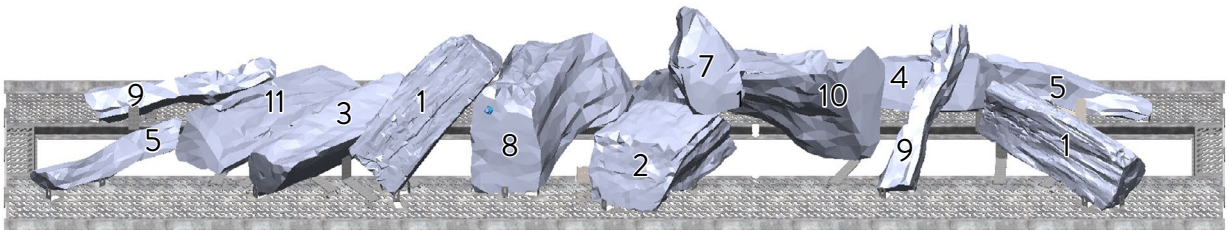

Now place the embers in a **SINGLE EVEN** layer around the logs over the burners and infill, do not add additional embers use only the quantity in bags provided. The embers must not cover the pilot flame, inside the pilot guard must be clear of embers.