

TC970 ZERO CLEARANCE KIT ASSEMBLY INSTRUCTIONS

The following steps describe the assembly process for the TC970 Zero Clearance Kit. The TC970 Zero Clearance Kit is used where the TC970 In-Built wood fireplace is to be installed into timber framed cavity. Complete this assembly prior to installation into the timber framed cavity.

Parts Supplied:


- 1x TC970 ZCK Base Panel
- 2x TC970 ZCK Side Panel Assembly
- 1x TC970 ZCK Back Panel Assembly
- 1x TC970 ZCK Inner Top Panel
- 1x TC970 ZCK Outer Top Panel
- 1x TC970 ZCK Spigot
- 1x TC970 ZCK Spigot Ring
- 3x TC970 ZCK Base Supports (*retain for installation*)
- 1x TC970 ZCK Wall Lining Fixing Rail (*retain for installation*)
- 46x SS Sealed Rivets

VIEWING ANGLE



STEP 1

Locate the 2x TC970 ZCK Side Panels and lay them on their edges. The directional arrow (circled red) represents the top and should be pointing away from you in this step. On completion all directional arrows will point upwards. Fix 1x TC970 ZCK base panel to the sides as shown right, with 12x rivets (6 each side).


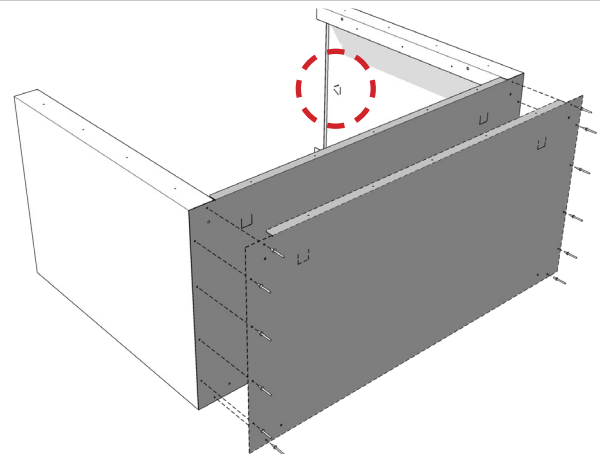


RIVET GUN

STEP 2

Locate 1x TC970 ZCK back panel and rivet to the TC970 ZCK sides and base panel with 13x rivets. The directional arrow (circled red) represents the top and should be pointing away from you in this step.

Fold 2x base tabs upwards to vertical, from inside of the TC970 ZCK.

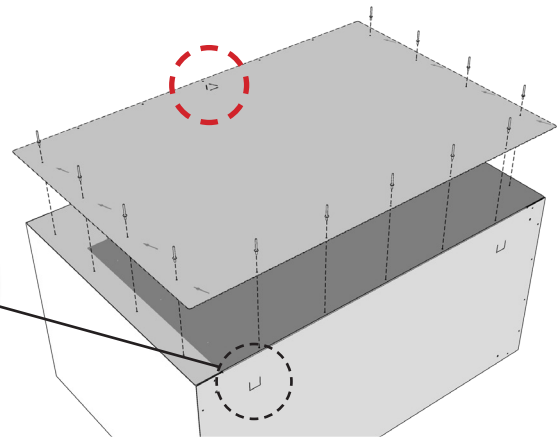
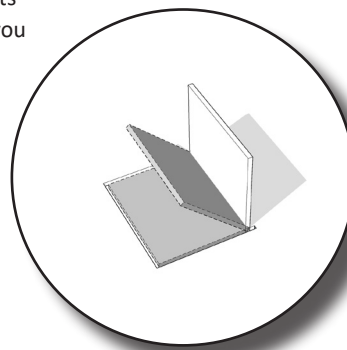


RIVET GUN

STEP 3

Lift the combined TC970 ZCK Base, Back and Sides to vertical, resting on the base panel. Directional arrows should be upwards.

Fit TC970 ZCK Inner Top Panel into the TC970 ZCK. The outer folds of the TC970 ZCK Inner Top Panel face down, and will overlap the inner side and inner back panels. This part is not fixed in place.

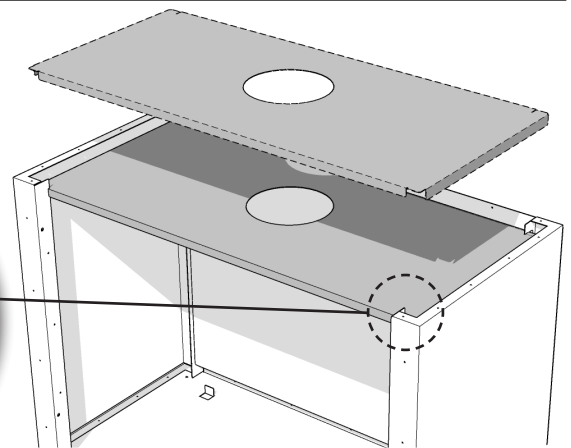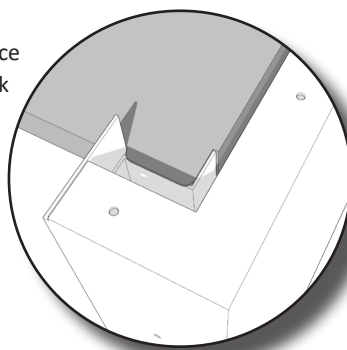



STEP 4

Locate TC970 ZCK Outer Top Panel and fit to the TC970 ZCK assembly. Fix to the TC970 ZCK side panels using 12x rivets (6 each side) and 5x rivets along the back.

Locate 3x tabs on the central cutout of the TC970 ZCK Outer Top Panel and fold upwards to vertical. These assist in locating the ZCK 250mm Ø Spigot.




RIVET GUN

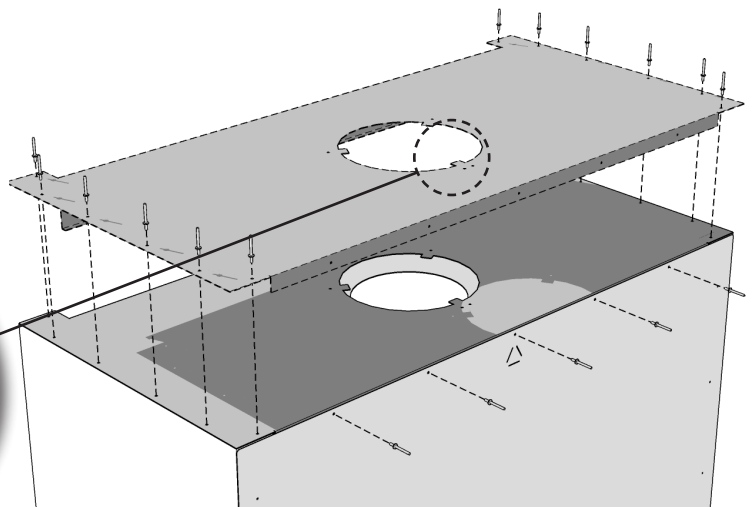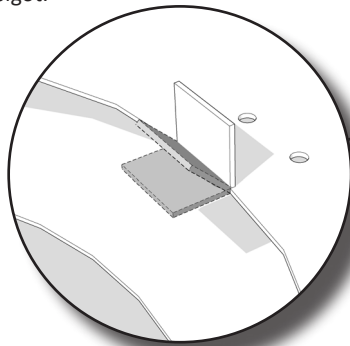

STEP 5

Locate TC970 ZCK 250mm Ø Spigot over the 3x vertical tabs on the TC970 ZCK outer top panel. This part is not fixed in place.

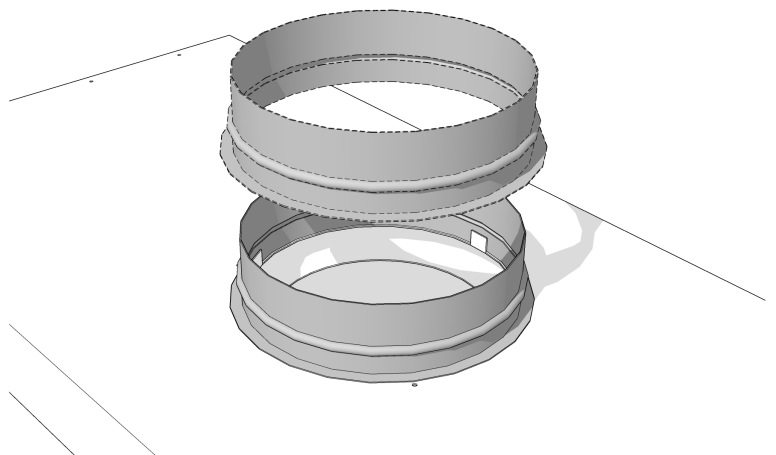

STEP 6

Locate the spigot fixing ring and twist one side upwards and the other downwards (as shown right) to separate. Do not pull apart sideways. Slip over the spigot and align to the holes on the TC970 ZCK top panel.

Fix with 4x rivets as shown right.

Now completed, the TC970 ZCK can now be installed into the timber framed cavity.



RIVET GUN

