


Prolonged unprotected exposure to heat may be detrimental to the appearance or long term performance of the wall lining.

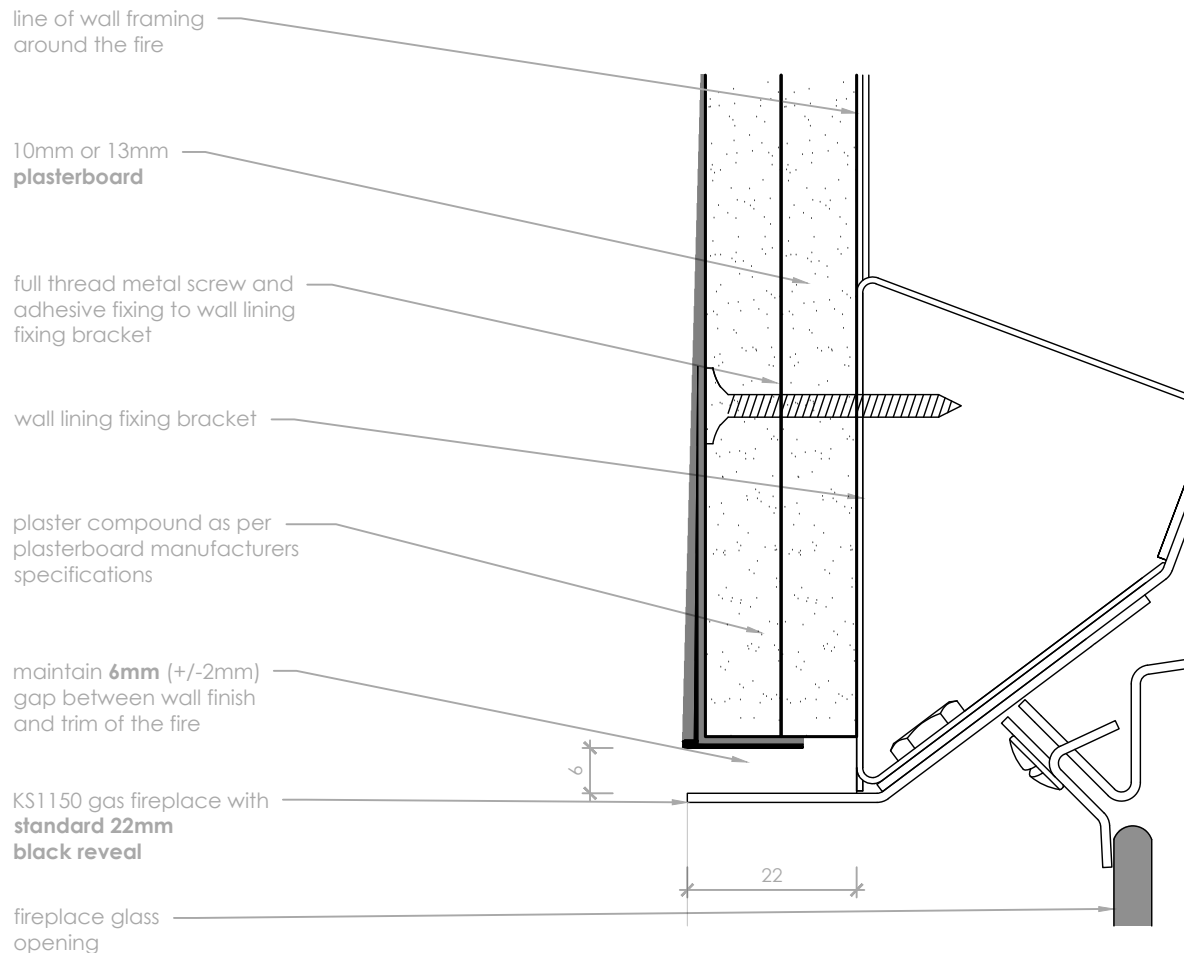

L-Trim Detail

scale 1:1


Notes:

- All dimensions are in mm. DO NOT SCALE OFF THESE DRAWINGS
- This detail is to assist in the installation of a **frameless finish** to a Mode KS1150 Gas Fireplace. They offer pathways for protection of heat sensitive linings and finishes.
- Escea recommends when using these finishing methods that **10mm plasterboard** is used.
- Use care when sanding plaster to avoid scratching black fireplace reveals - use a damp sponge to remove excess.
- Black fireplace reveals must be able to be removed - ensure any adhesive or compound is kept clear.
- **Do not excessively push back wall board when fixing it to the fire chassis** - use large daubs of adhesive to the appliance chassis, apply wall lining and flush finish with edge of the fire reveal.
- This technical sheet must be read in conjunction with the Mode KS1150 Installation Manual, the latest version can be found on our website at www.stokefires.com

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - aa@escea.com

Prolonged unprotected exposure to heat may be detrimental to the appearance or long term performance of the wall lining.

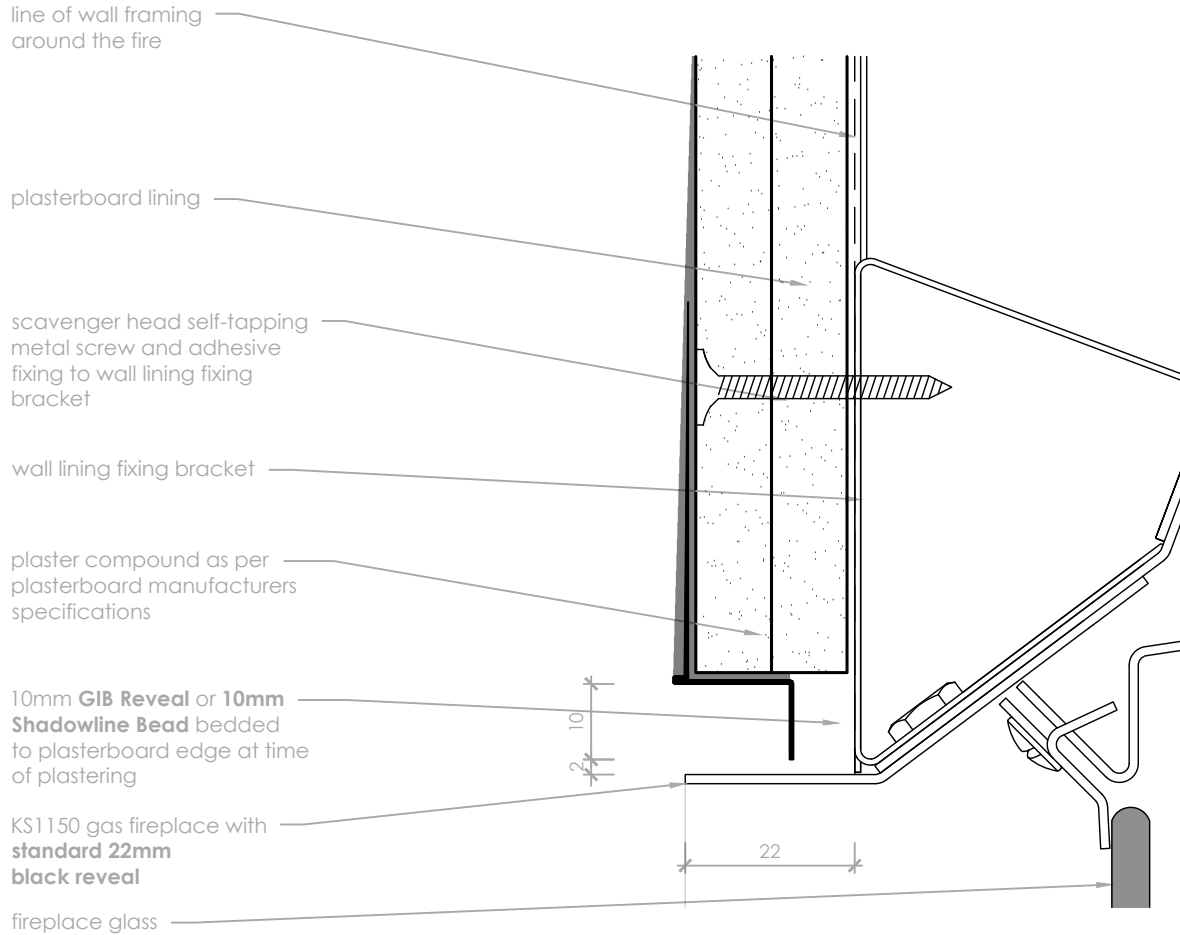

Negative Detail

scale 1:1

Notes:

- All dimensions are in mm. DO NOT SCALE OFF THESE DRAWINGS
- This detail is to assist in the installation of a **frameless finish** to a Mode KS1150 Gas Fireplace. They offer pathways for protection of heat sensitive linings and finishes.
- Escea recommends when using these finishing methods that **10mm plasterboard** is used.
- Use care when sanding plaster to avoid scratching black fireplace reveals - use a damp sponge to remove excess.
- Black fireplace reveals must be able to be removed - ensure any beading, adhesive or compound is kept clear.
- **Do not excessively push back wall board when fixing it to the fire chassis** - use large daubs of adhesive to the chassis, apply wall board and flush finish with edge of the fire reveal.
- This technical sheet must be read in conjunction with the Mode KS1150 Installation Manual, the latest version can be found on our website at www.stokefires.com

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - aa@escea.com