


Prolonged unprotected exposure to heat may be detrimental to the appearance or long term performance of heat sensitive linings and finishes. Ensure that any heat sensitive materials are not exposed to direct heat from the fireplace viewing area.

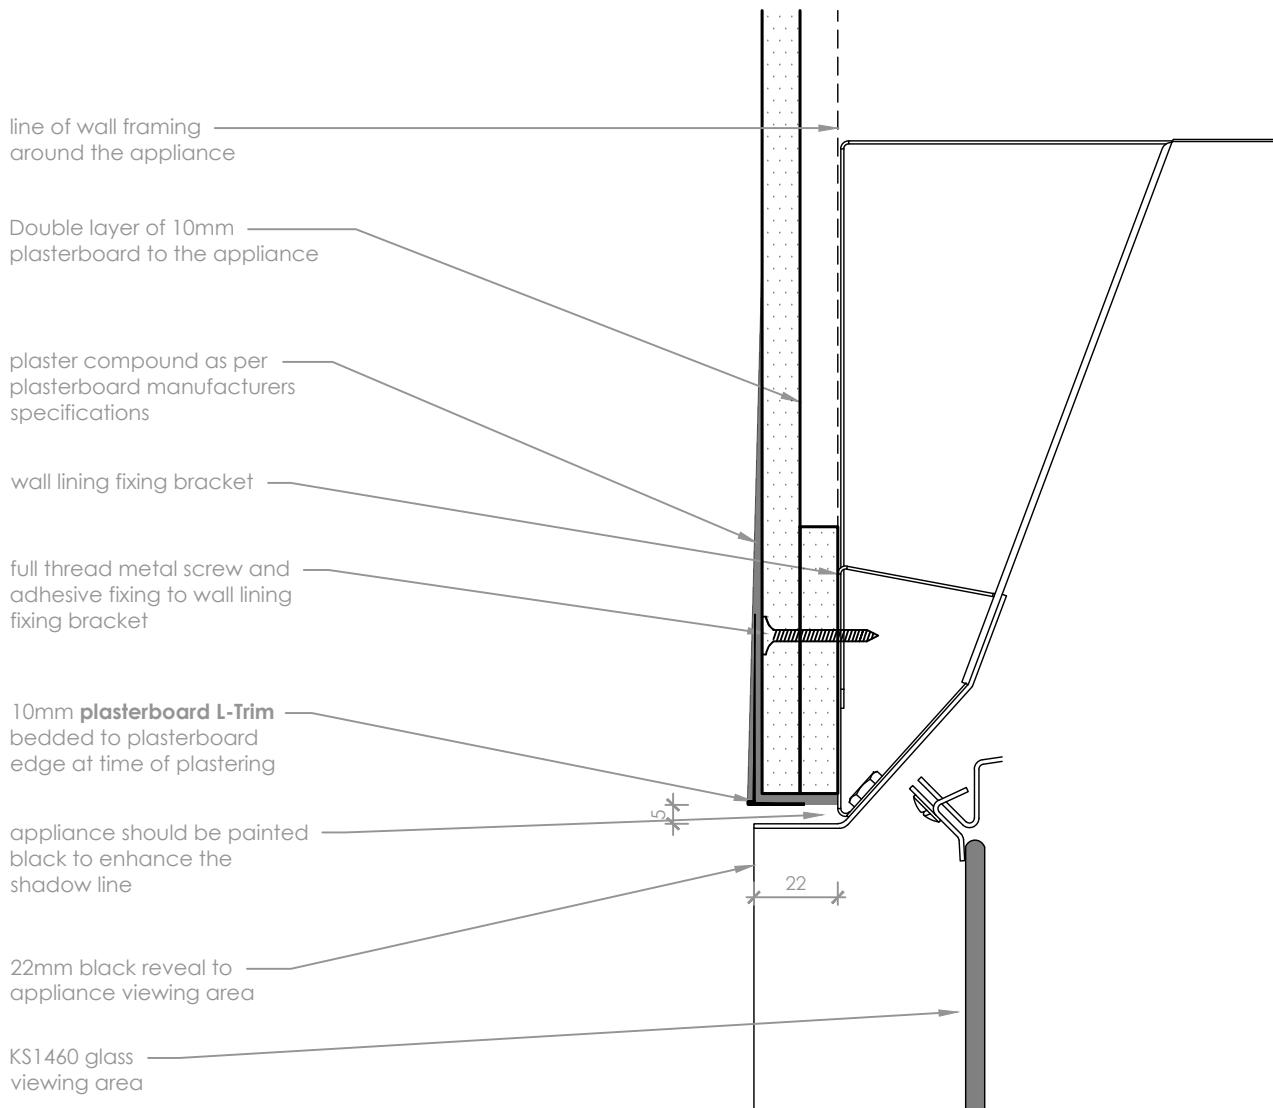

**Plasterboard Detail A**

scale 1:2


**Notes:**

- All dimensions are in mm. DO NOT SCALE OFF THESE DRAWINGS
- This detail is to assist in the installation of an indoor, frameless finish to a **Mode KS1460 Single or Double Sided Gas Fire**.
- Escea recommends when using these finishing methods that **10mm plasterboard** is used.
- Use care when sanding plaster to avoid scratching black fireplace reveals - use a damp sponge to remove excess.
- Black fireplace reveals must be able to be removed - ensure any adhesive or compound is kept clear.
- Do not excessively push back wall board when fixing it to the fire chassis - use daubs of adhesive to the appliance chassis, apply lining and ensure a flush finish with edge of the fire reveal.
- This technical sheet must be read in conjunction with the Mode KS1460 Installation Manual, the latest version can be found on our website at [www.stokefires.com](http://www.stokefires.com)

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - [aa@escea.com](mailto:aa@escea.com)

Prolonged unprotected exposure to heat may be detrimental to the appearance or long term performance of heat sensitive linings and finishes. Ensure that any heat sensitive materials are not exposed to direct heat from the fireplace viewing area.

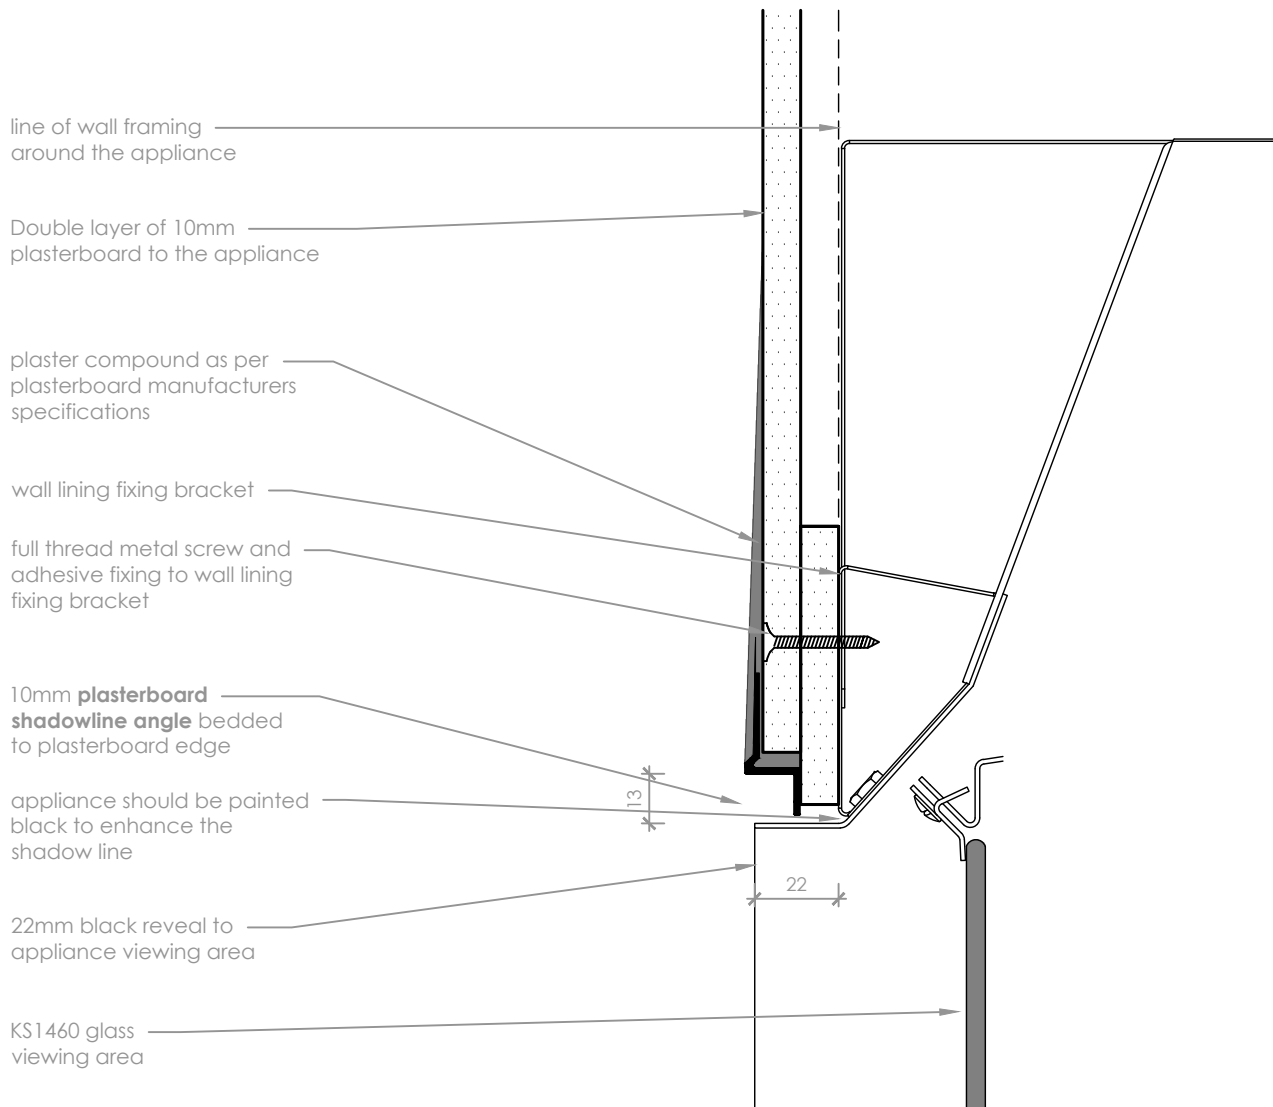

**Plasterboard Detail B**

scale 1:2

**Notes:**

- All dimensions are in mm. DO NOT SCALE OFF THESE DRAWINGS
- This detail is to assist in the installation of an indoor, frameless finish to a **Mode KS1460 Single or Double Sided Gas Fire**.
- Escea recommends when using these finishing methods that **10mm plasterboard** is used.
- Use care when sanding plaster to avoid scratching black fireplace reveals - use a damp sponge to remove excess.
- Black fireplace reveals must be able to be removed - ensure any adhesive or compound is kept clear.
- Do not excessively push back wall board when fixing it to the fire chassis - use daubs of adhesive to the appliance chassis, apply lining and ensure a flush finish with edge of the fire reveal.
- This technical sheet must be read in conjunction with the Mode KS1460 Installation Manual, the latest version can be found on our website at [www.stokefires.com](http://www.stokefires.com)

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - [aa@escea.com](mailto:aa@escea.com)